

Polycom ViewStation Remote Control Connecting Procedures

To place an IP call:

**Step 1. Pick up the remote to activate.
You will see this screen.**



**Step 2. Press the green call/hang up button.
You will see this screen.**

Step 3. Using the left arrow key backspace to remove the existing numbers or IP address.

Step 4. Make sure the speed is set to 384 and mode to IP



**Step 5. Using the keypad enter the number or IP address in the video phone field
Use the right arrow key for . if typing an IP address.**

Call/Hang Up Button

Use left arrow to backspace

Enter button

Use keypad to enter number or IP address

